



sales@eddywireless.com

L50

Quectel GPS Engine

EVB User Guide

L50_EVB_UGD_V1.0



Document Title	L50 EVB User Guide
Version	1.0
Date	2011-08-08
Status	Release
Document Control ID	L50_EVB_UGD_V1.0

General Notes

Quectel offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Quectel. The information provided is based upon requirements specifically provided for customers of Quectel. Quectel has not undertaken any independent search for additional information, relevant to any information that may be in the customer's possession. Furthermore, system validation of this product designed by Quectel within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information of Quectel Co., Ltd. Copying of this document, distribution to others, and communication of the contents thereof, are forbidden without permission. Offenders are liable to the payment of damages. All rights are reserved in the event of a patent grant or registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Shanghai Quectel Wireless Solutions Co., Ltd. 2011

Contents

Contents	2
Table Index.....	3
Figure Index	4
0. Revision history	5
1. Introduction.....	6
1.1. Reference.....	6
1.2. Abbreviations	6
2. EVB Kit introduction	7
2.1. EVB top view	7
2.2. EVB accessories.....	8
3. Interface application.....	9
3.1. Power interface.....	9
3.2. UART Interface	9
3.3. Antenna interface.....	10
3.4. Switches	10
3.5. Operating status LEDs	11
3.6. Buttons	11
4. EVB and accessories.....	12
5. Starting SiRFLive	13

Table Index

TABLE 1: REFERENCE.....	6
TABLE 2: ABBREVIATIONS	6
TABLE 3: PINS OF UART PORT.....	9
TABLE 4: SWITCHES AND BUTTONS.....	10
TABLE 5: OPERATING STATUS LEDS	11
TABLE 6: BUTTONS	11

Figure Index

FIGURE 1: EVB TOP VIEW	7
FIGURE 2: EVB ACCESSORIES	8
FIGURE 3: POWER INTERFACE	9
FIGURE 4: UART INTERFACE	9
FIGURE 5: PATCH ANTENNA ASSEMBLY	10
FIGURE 6: SWITCHES.....	10
FIGURE 7: OPERATING STATUS LEDS	11
FIGURE 8: BUTTONS	11
FIGURE 9: EVB AND ACCESSORIES EQUIPMENTS.....	12

0. Revision history

Revision	Date	Author	Description of change
1.0	2011-08-08	Roy CHEN	Initial

1. Introduction

This document defines and specifies the usage of L50 EVB (Evaluation Board). Customers can get useful information about L50 EVB and GPS demo tool from this document.

1.1. Reference

Table 1: Reference

SN	Document name	Remark
[1]	L50_HD	Hardware Design

1.2. Abbreviations

Table 2: Abbreviations

Abbreviation	Description
C/NO	Carrier/Noise
GPS	Global Positioning System
HDOP	Horizontal Dilution of Precision
SV	Satellite Vehicle
UART	Universal Asynchronous Receiver & Transmitter
UTC	Universal Time Coordinated

2. EVB Kit introduction

2.1. EVB top view

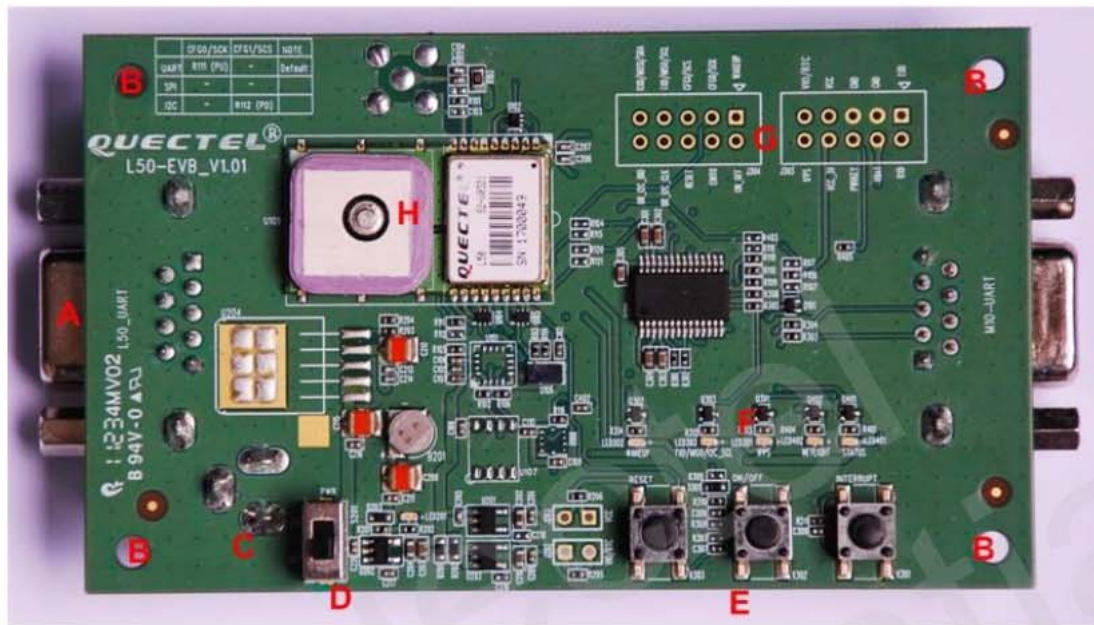


Figure 1: EVB top view

- A: GPS UART port
- B: Screw assembly hole
- C: Adapter interface
- D: POWER switch
- E: Buttons of GPS_RESET, ON/OFF
- F: Indication LEDs
- G: Test points
- H: L50 Module

2.2. EVB accessories

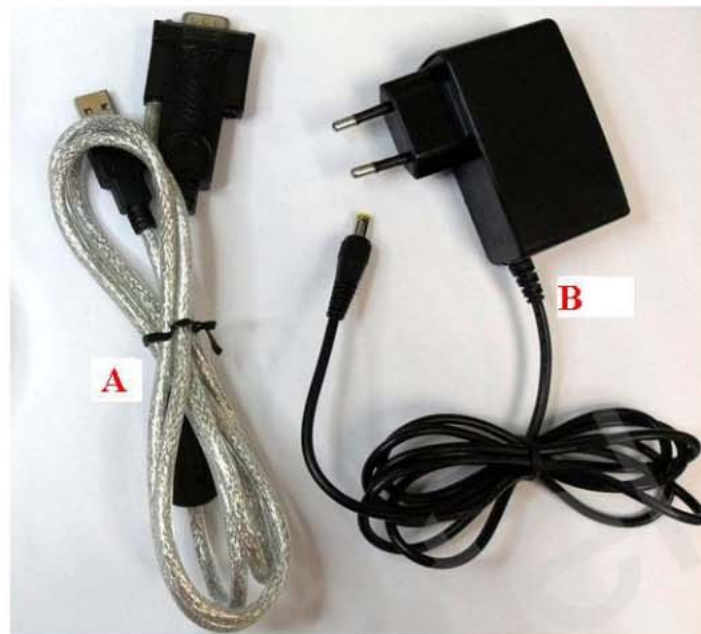


Figure 2: EVB accessories

A: Serial port cable (USB 2.0)

B: DC5V/2A power adapter

3. Interface application

3.1. Power interface

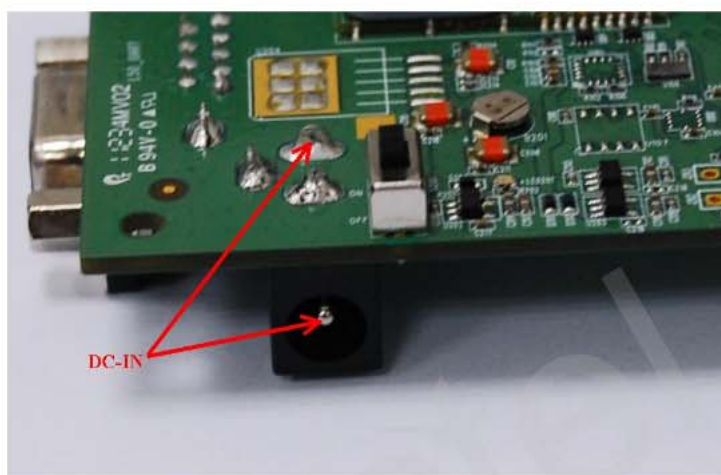


Figure 3: Power interface

3.2. UART Interface

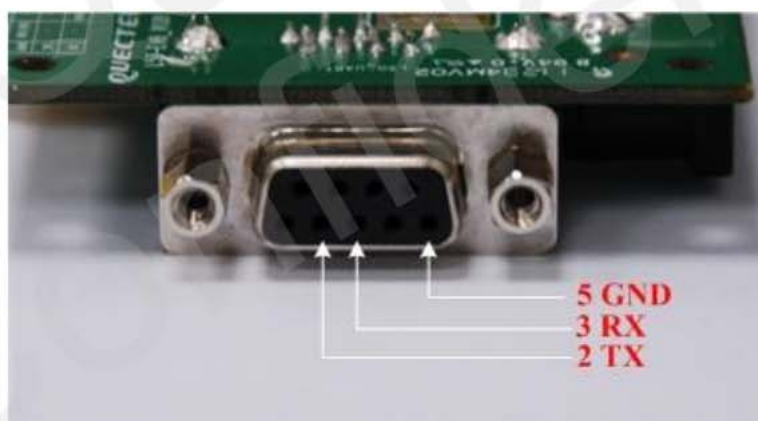


Figure 4: UART interface

Table 3: Pins of UART port

Pin	Signal	I/O	Description
2	TXD(RS232)	O	Transmit data
3	RXD(RS232)	I	Receive data
5	GND		GND

3.3. Antenna interface



Figure 5: Patch antenna assembly

3.4. Switches



Figure 6: Switches

Table 4: Switches and buttons

Part	Name	I/O	Description
S1	POWER	I	Control power supply from adapter

3.5. Operating status LEDs

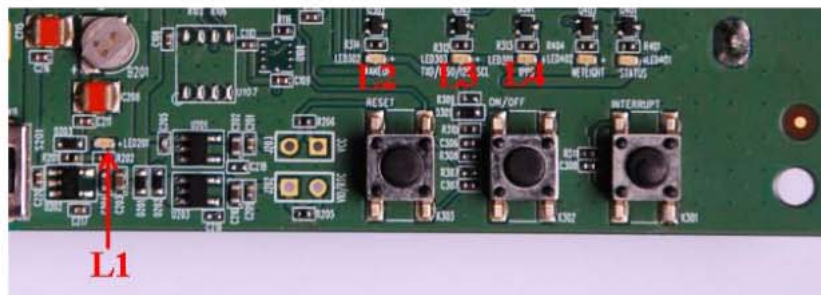


Figure 7: Operating status LEDs

Table 5: Operating Status LEDs

Part	Name	I/O	Description
L1	POWER	O	Lighten: VCC ON Extinct: VCC OFF
L2	WAKEUP	O	Lighten: module works in full on mode Extinct: module works in hibernate mode
L3	TXD_MISO_SCL	O	1.UART_TX UART data transmit(TXD) 2. I2C_CLK I2C clock(SCL)
L4	1PPS	O	One pulse per second

3.6. Buttons

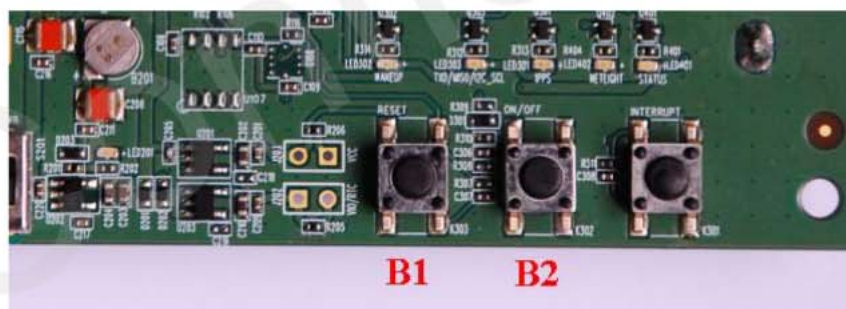


Figure 8: Buttons

Table 6: Buttons

Part	Name	I/O	Description
B1	GPS_RESET	I	Reset the module
B2	ON/OFF	I	Switch status between Wakeup and Hibernate

4. EVB and accessories

The EVB and its accessories are equipped as shown in Figure 9.

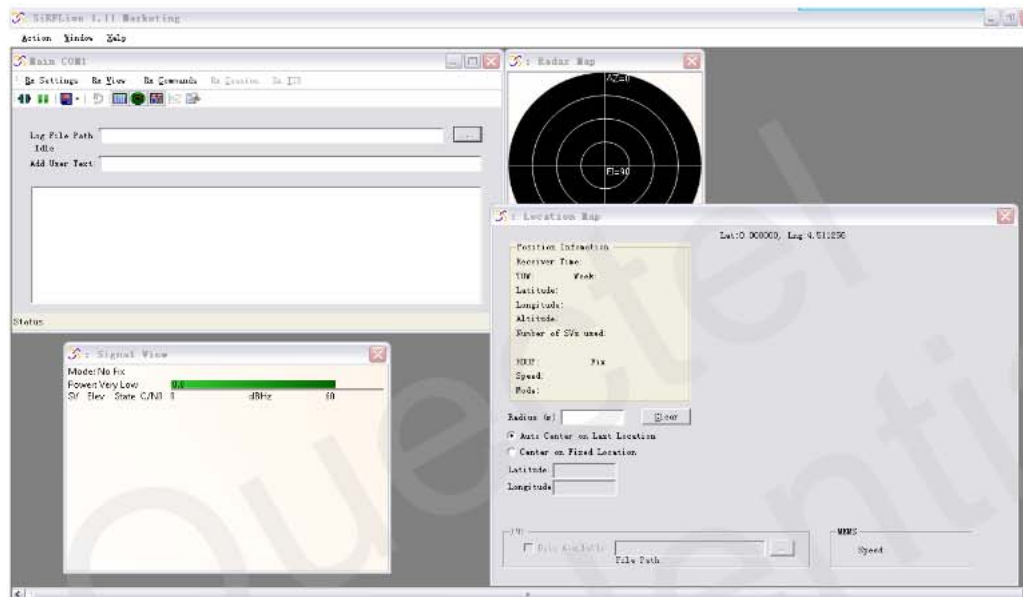


Figure 9: EVB and accessories equipments


5. Starting SiRFLive

The SiRFLive tool can help users to detect the status of GPS receiver and record NMEA data. The steps in using SiRFLive for L50 are described as below:

1. After the EVB has been assembled, connect the RS232 to USB cable to PC, and power on the module, then the LED L3 (TXD_MISO_SCL) will flash. The operation window of SiRFLive is shown as below:




2. Click the button **Rx Settings** to select COM port and baud rate 4800 in pop-up window:

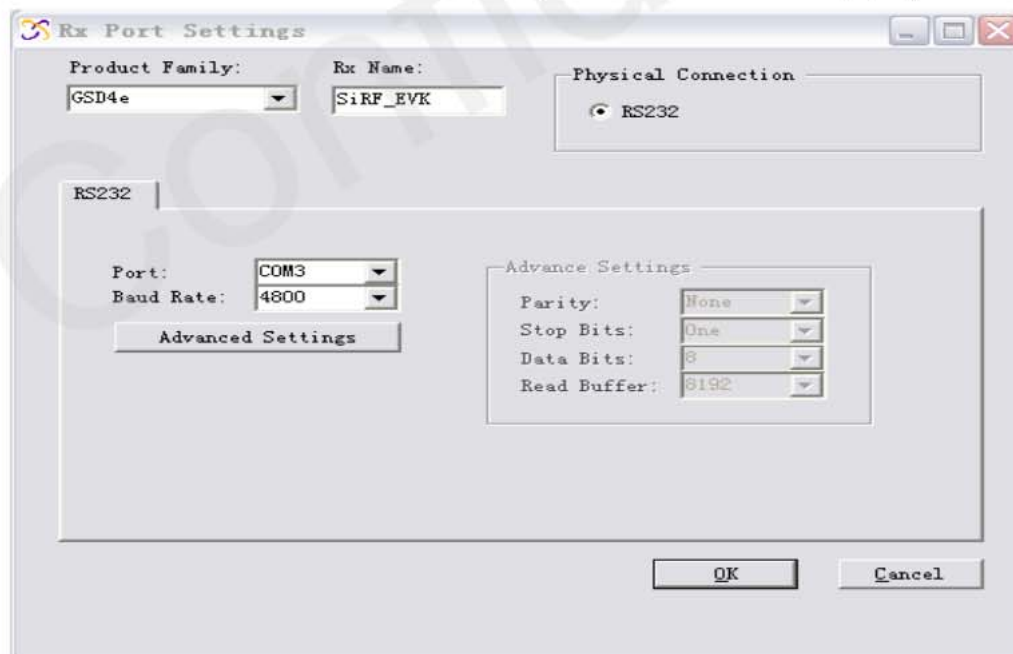


The operation window will show NMEA data, Signal view, Radar view, Location map and

L50_EVB_UGD_V1.0


Position information including UTC, latitude, longitude, altitude, HDOP, speed and so on.

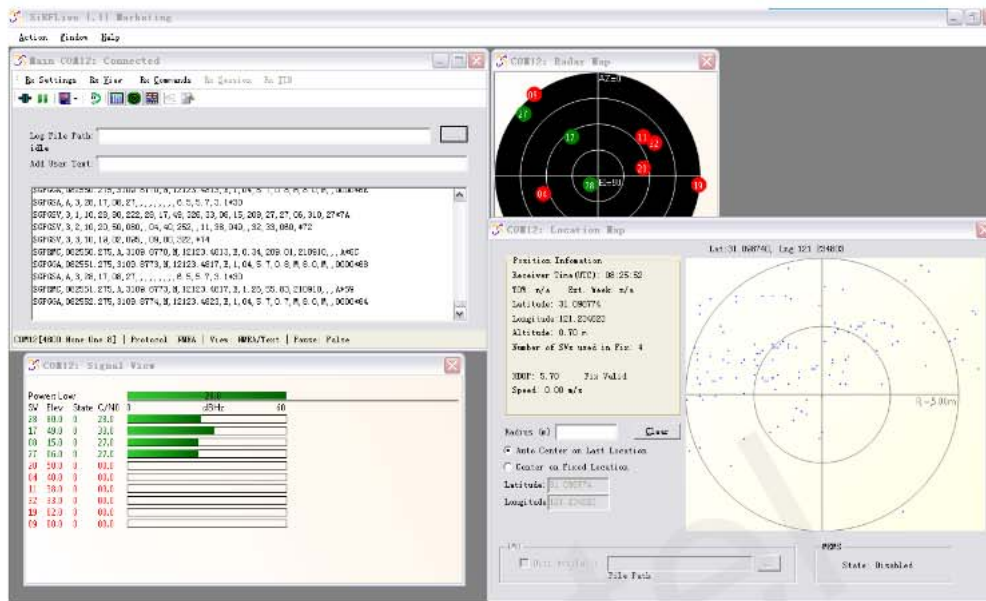


4. Click button , the reset window will pop up as below:

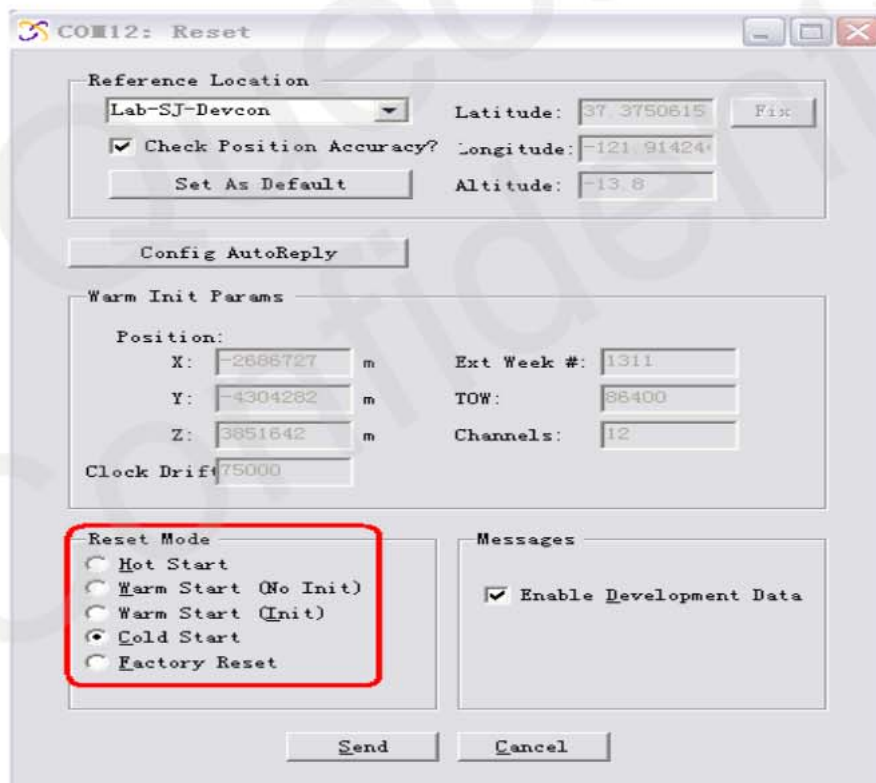

5. Select reset mode and click “Send” to implement Cold Start, Warm Start or Hot Start.
Use the toolbar below to save NAME data.

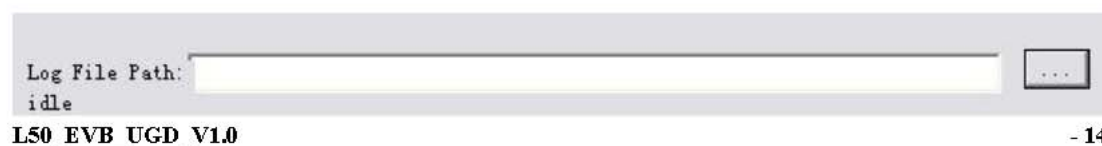

6. Use the menu below to record log and Stop log.

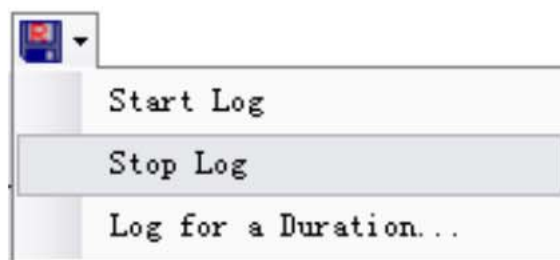



Shanghai Quectel Wireless Solutions Co., Ltd.

Room 501, Building 13, No.99, Tianzhou Road, Shanghai, China 200233

Tel: +86 21 5108 6236

Mail: info@quectel.com

sales@eddywireless.com